



Manual

RGB+CCT Remote



Model No.: HR01

Features

- 16 Millions color
- Color temperature/Brightness/saturation dimmable
- 2.4G RF wireless transmission technology
- Control distance 30m
- 4 Zones individual control, countless lights in each zone


Parameters

Model No.: HR01
Battery: AAA*2PCS
Standby Power Consumption: 15 μ A
Transmitting Power: 6dBm
RF: 2.4GHz
Control Distance: 30m
Working Temperature:-20~45°C

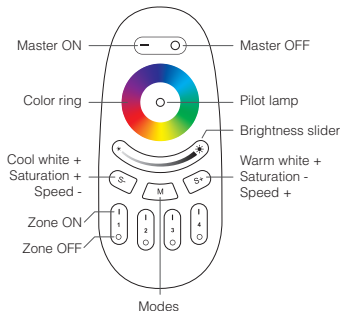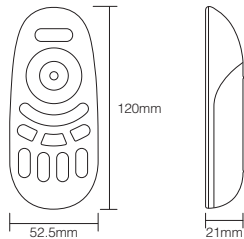


Battery Installation

User need to buy battery separately, please pay attention to battery “+” and “-”

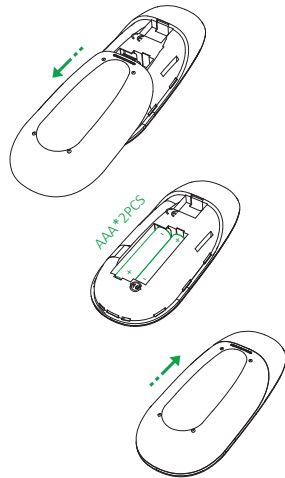


Linking Code

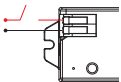

1. Power off



2. Wait for 10 seconds

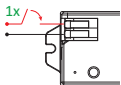

3. Power on




4. Short press "I" 3 times within 3 seconds

Linking code is done if the lights flashes 3 times slowly.



Don't use "Master ON" to link code.
You only can link lights into one zone on one remote .


Cleaning Code

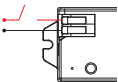

1. Power off



2. Wait for 10 seconds

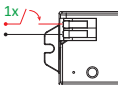

3. Power on



4. Short press "I" 5 times within 3 seconds

Cleaning code is done if the lights flashes 7 times quickly.

White Color

1. Long press "I" in group zone or "Master ON" to get white color
2. Press "S-" to dim WW, press "S+" to dim CW

Saturation

1. Touch any point on "Color ring"
2. Press "S-" for increasing, press "S+" to decreasing

Brightness

Brightness up to down (from right to left)

Dynamic mode

1. Press "M" to get dynamic mode, press "M" one time to get one dynamic mode
2. Press "S-" and "S+" to change speed

Login out : Long press "I" on group zones or touch "color ring"

Attention

1. Pay attention to battery "+" and "-" while doing installation.
2. Please replace new battery if the indicator flashes quickly.
3. It's better to remove battery if you don't use remote frequently.
4. Don't use remote near metal or magnetic area.



For more information,
scan QR code

Made in China

